

Restore QuickScan® Mobile Default



Enter configuration



Set Radio Address



+

four digits for the QuickScan® Mobile Address (from 0000 to 1999).



0



1



2



3

Exit and Save configuration



Bind



Disable Check Digit

Enter Configuration



UPC A



UPC E



Exit and Save Configuration



Disable CR

Enter Configuration



no terminator



Exit and Save Configuration



Enable CR

Enter Configuration One Character Terminator



Exit and Save Configuration

